



20.Rear Quarter Trim

A: REMOVAL


- 1) Remove the third-row seats. <Ref. to SE-19, REMOVAL, Third Seat.>
- 2) Remove the rear door scuff plate. <Ref. to EI-45, REAR DOOR SCUFF PLATE, REMOVAL, Side Trim.>
- 3) Remove the lower anchor cover.

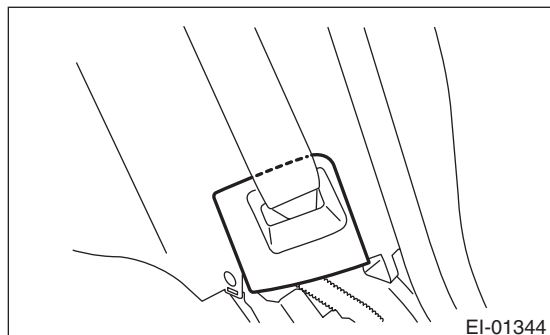


- 4) Remove the luggage floor mat and utility box.
- 5) Remove the luggage floor end cover.

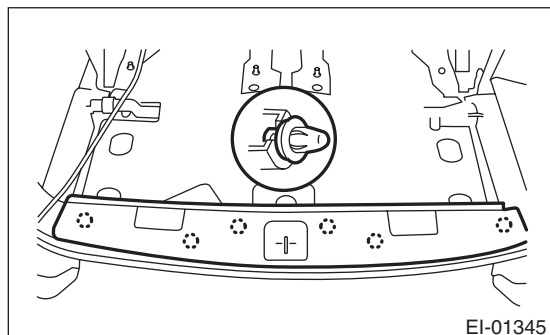


- 6) Remove the cover, and remove the bolts inside.

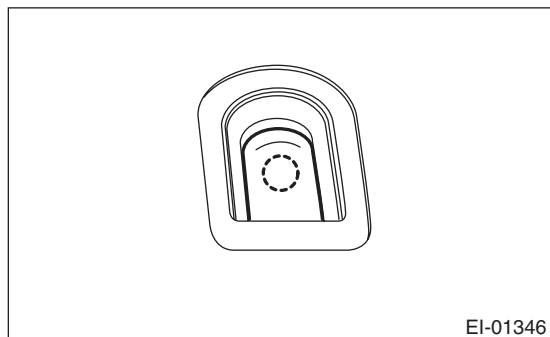


- 7) Remove the rear quarter lower trim.

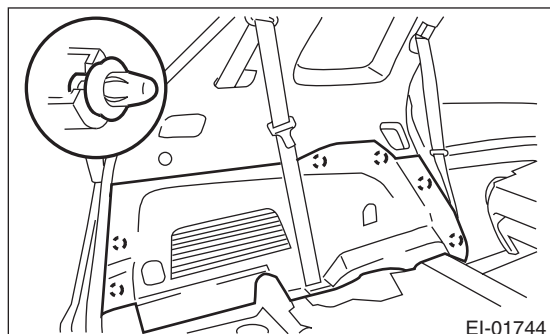


- 8) Remove the lower anchor bolts of second-row seat belts.

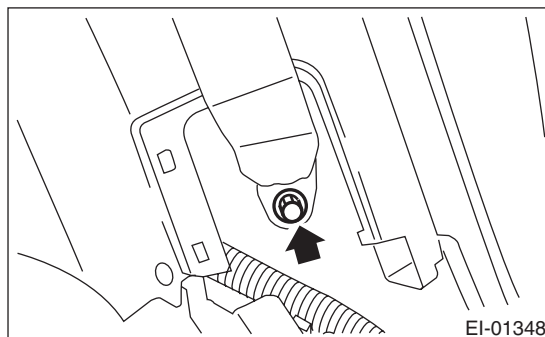

- 9) Remove the upper and lower anchor bolts of third-row seat belts.

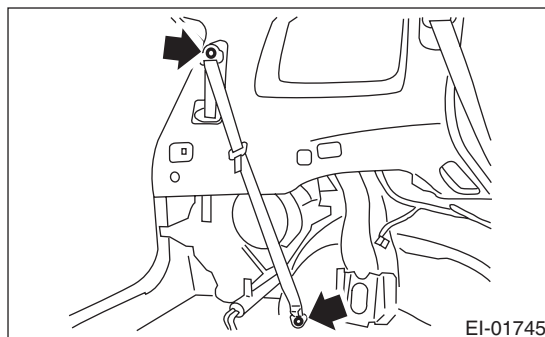


- 10) Remove the screws.

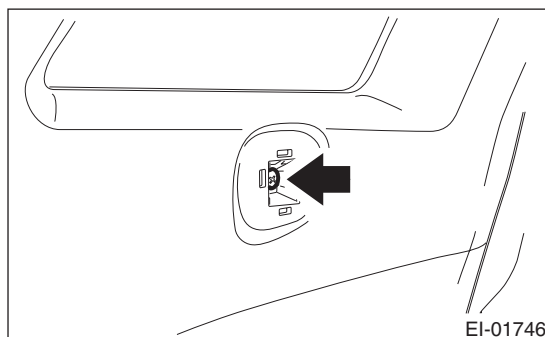

NOTE:

For models equipped with a third-row seat, there is a cap.

- 11) Remove the cover (A), and remove the bolts inside.

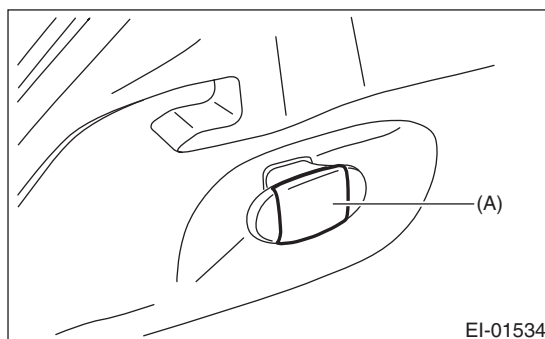


- 12) Remove the cap (A) on the upper side of pillar trim, and remove the bolt inside.

Rear Quarter Trim

EXTERIOR/INTERIOR TRIM

13) Disconnect each connector, and remove the rear quarter upper trim.

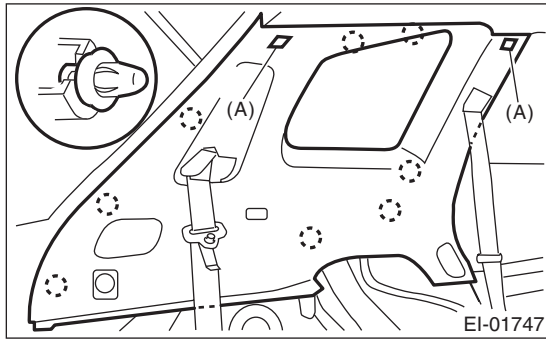

B: INSTALLATION

Install in the reverse order of removal.